

正反面印刷，风琴折，90*120mm

智能遥控打窝船

使用说明书

“渔”悦生活由我智创

产品特色介绍：

- **材质过硬**
船体采用ABS工程塑料，无毒、无味，兼有韧、硬、刚的特性，有超强的抗冲击度和耐磨性，不易磨损，抗划痕性强，能长期保持如新的色泽，还具有很好的抗化学污染性，更易于清洁！
- **专用数码自动调频装置**
专用电路和专用数码自动调频遥控装置，彻底解决多条传统航行时相互干扰，遥控距离近、失控捞船等麻烦
- **抗风性强**
单体流线船体设计，整船做了防水处理，能有效防止各类渗透漏水现象，3-4级风照常行驶！
- **续航能力强**
低噪音、低耗能，可连续航行2小时！
- **操控能力强**
操作简单、稳定性强、无极变速，前进、后推、左右转弯灵活自如！

配件介绍：

- **马达**
转弯半径★★★★★
转弯半径0.8-1.0米
- **电池**
电源：7.4V×5200AH免维护电池。可连续工作2小时以上，在适当的情况下可以另加一组电池，续航时间更持久；
报警设置：缺电报警设置，确保遥控船安全返回；
(本机内置一组电池)
- **夜航灯**
夜航指示灯帮助钓鱼者在夜晚操作时能辨别航行方向，并起到诱鱼的效果。
- **遥控器**
遥控距离★★★★★
遥控距离300米左右。
- **船体**
动作：前进、后推、左右转弯，抛洒鱼饵拖带投放鱼饵。
控制灵敏精准，并可抗击3-4级风浪。

“渔”悦生活由我智创

• 船体介绍



“渔”悦生活由我智创

单手遥控器按键功能说明



遥控器与船体配对：

- 配对时船体必须放在平地上，长按遥控器OK键的同时并打开电源键，再打开船体开关大概1秒钟遥控器发出“滴滴”3声，方可松开OK键，配对成功。

正常遥控模式：

- 使用遥控器控制马达转速，遥控杆上下调节马达前进后退转速，左右调节马达直线行驶，分二种情况：遥控杆上下位置停在中间点时，此时船为停止状态，向左或向右拨动遥控杆，此时右或左马达停止转动，左或右马达按比例从0% (马达能推动船最小转速)~100%调速转动，主要用于控制偏航问题。
- 当向上或向下拨动遥控杆，左右马达转速按比例从0%~100%转动，此时向左或向右偏航转动，左右马达转速会微调。
例如：当遥控杆居中时，向上推动遥控杆到80%位置，此时左右马达转速在80%，如果将遥控杆慢慢向右偏，此时右马达转速还是80%，左马达转速可以从80%调到0%，主要用于控制偏航问题。

定速巡航模式：

- 当遥控杆向前或向后行驶时，按一下遥控器上定速巡航键，松开遥控杆后，船按当前设定转速行驶。当船在停止模式时，定速巡航键没有功能。
当在定速巡航模式时，将遥控杆向左或向右拨动，此时可以微调左右马达转速。例如：向左拨动遥控杆，此时右马达转速会加1，按遥控杆不放，当右马达转速加到最大时没有办法在加大转速时，左马达转速会减1。在定速巡航模式，在按一下定速巡航键，会解除定速巡航模式。

电压指示：

- 当遥控器电压低于2.3v时，遥控器上LED慢闪，表示遥控器电池低电压。

“渔”悦生活由我智创


人机工学单手遥控手柄

流线型船体 7.4V×5200mA 大容量电池
• 航行更平稳
• 抗风浪性更强
• 充电更快
• 续航时间更长



电池使用与充电说明：

- 主机电池 (标配)
- 电池充电接口
本机内置一组电池，使用时将电池仓接口对接即可
- 备用电池接口
(备用电池需另外选购)

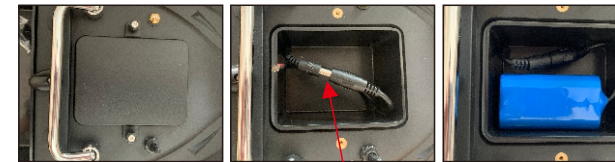

电池充电接口

"FISH" IS A LIFE OF MY LIFE

Accessories Introduction

- **Motor**
turn radiusturn radius 0.8-1.0M
- **Battery**
power: 7.4V 5200AH, free maintain battery, lasting time is above 2 hoursalarm: low battery is with the alarm setting to ensure the safe back.
- **Night Light**
the night light can help to fish-men to distinguish the direction and seduce the fish
- **Remote Controller**
remote control distance
remote control distance above 300M
- **Boat Body**
direction: forward, back, right and left turn, release the bait control flexibly and precisely, can resist the wave about 3-4 level."

Features Introduction:

- **Best Quality**
The boat adopts the ABS which is without the poison and smell, the ABS is with the strong anti-resistant and abrasion resistance, the boat color can be kept a long time. It is easy to clean as the ABS can beats the chemical pollution.
- **Professional Digital Full Automatic FM Device**
It can solve the phenomenon: interference of a few boats sailing; short distance of remote controlling;out of control to pick up the boat.

"FISH" IS A LIFE OF MY LIFE

• Resistant the Strong Wind and Wave

Two motors design, it is with the waterproof function. It can stop the the boat from the water, the boat can run well and normally under 5 class wind.
• Long Time Lasting
Simple operation, stability is strong, change the speed and direction freely.

• Introduction to hull



"FISH" IS A LIFE OF MY LIFE

Host battery



Detachable rod For towing hook and trawl



Remote Controller Details

"FISH" IS A LIFE OF MY LIFE

Remote Controller Matches to the Boat :

- When pairing, the hull must be on the flat ground
Switch the power of the boat* switch the power of the remote controller, press the learning button long time enough and hear the voice of the "be" which indicates that the matching signal is going on.* switch the power of the receiver, and the LED indicator of the receiver is flashing, this means the matching is successful.
- **Normal Remote Control Mode:**
Using the rocker control the motor. Rocker up and down adjust the motor forward, backward and rotation speed. Left and right adjust the motor straightly, there are two kinds of circumstance as follows:
• The rocker is at the middle of the up and down position, the boat is at the state of the stopping. The rocker is to the left or right, the left or the right motor stop turning. The left or right motor is from 0% (the motor can drive the ship at the minimum speed) to 100% speed rotation, it is mainly used for spiraling.
- When the rocker is to the up or down, the left and right motors will rotate from 0% to 100%, at this time, the left and right motors will adjust the rotation speed slightly if the rocker is to left or right. For example, when the rocker is at the middle, push up the rocker to the 80% position, the left and right motor speed is at 80%. The right motor speed is still 80% if the rocker is shifted to the right slowly, and the left motor speed can be adjusted from 80% to 0%, this operation

Constant Speed Cruise Mode:


- When the remote control bait boat moves forward or backward, press the cruise button on the remote controller, release the rocker, and the boat will run at the current speed. When the boat is in stopping mode, the cruise button is without any function. When in constant speed cruise mode, can adjust the left and right motor speed under moving the rocker to the left or right. For example: pull the rocker to the left, then the right motor speed will be increased by 1, press and hold the rocker, when the right motor speed increases to the maximum, there is no way to increase the speed, the left motor speed will be decreased by 1. The cruise mode will be removed by pressing the cruise button.

Voltage Indication :

- The LED on the remote controller will flash slowly which is showing the low battery voltage of the remote controller when the voltage of the remote controller is lower than 2.3v.

Instruction to the battery usage and charging

- **Main Battery (Standard)**
- **Charging interface**
The machine has a set of batteries built in. When in use, the battery storage interface can be docked.
- **Standby battery interface**
(the standby battery should be bought separately)

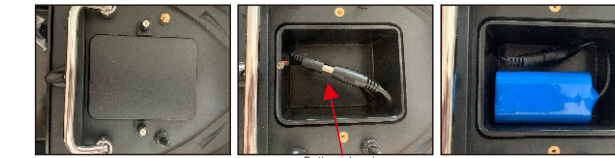

Battery charging interface

"FISH" IS A LIFE OF MY LIFE

Ergonomic remote control handle

Streamline boat body 7.2V×5200mA high capacity battery
• Running is more stable
• Resistance to the wind and wave is more strong
• Fast charging
• Long time lasting



Maintenance

- **Controller**
please kindly take out the battery if there is a long time for leaving unused.
- **Motor**
Check the motor for debris after each use.
- **Boat Body**
1. please keep dry and clean for the boat after using the boat.
2. please take out the battery and keep well if do not use the boat.
3. please do not put the boat with the corrosive liquid.
4. Do not close to the high temperature target.
5. please put the boat into the bag to keep the boat from the dusty if do not use the boat.

